Mounting the UCLEAR Pulse Pro Dual MEMS microphones in Full Face, Modular, and ¾ Helmets:


Remove the helmet headliner from the front/brim.

Using the included small hook & loop mic mounting rounds, or tape, mount the Pro-Microphones under the liner in the brim of the helmet. Typically, this brim material is perforated and unpadded. Avoid placing the microphones inside air vent channels.

Tuck excess wire under the headliner and refit your headliner over the microphones. When headliner and padding is replaced, none of the microphones or wires should be visible.



UCLEAR Pro Microphones Placement

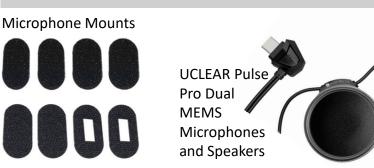

UCLEAR Pulse Pro Dual MEMS Pro Microphones in Schuberth C3 Pro or Touratech Aventuro Helmets:

Another good example for the perfect UCLEAR Pulse Pro microphone location in a Schuberth modular (flip front) helmet (similar helmet: Touratech Aventuro)

After removing the mesh layer of the inner liner, both microphones can be mounted invisible below the mesh and won't disturb while putting the helmet on/off or raise/close the flip part of the helmet. Thanks to <u>www.WebBikeWorld.com</u> for the test and pictures!





Pictures: Copyright by www.webBikeWorld.com

UCLEAR Pulse Pro Dual MEMS Microphones / Speakers Set



Mounting the UCLEAR Pulse Pro Dual MEMS microphones in Motocross Helmets, Breath Boxes:

For motocross helmets, or winter helmets with breath boxes, locate the microphones behind the cheek pads, up towards the mouth. Tuck wires behind cheek pads.

Avoid placing the microphones directly over or behind any air vents.

R°

Microphone Mounts

UCLEAR Pulse Pro Dual MEMS Microphones / Speaker Set